



WARNING: Electrical Hazard

These stair treads must be installed per HeatTrak™ instructions. Follow these important warnings to avoid the risk of fire or shock.

- * Do not remove or modify the safety device or the plug connected to the stair treads.
- * Do not plug in stair treads while stacked on top of one another.
- * Do not use extension cords.
- * Do not drive any form of nails, screws, fasteners, or other objects through the rubber surface of the stair treads. Use only the brass grommets for attachment.
- * Do not cut, slice, trim or otherwise alter the rubber surface.
- * Do not walk on the stair treads before it is completely installed.
- * Do not plug the stair treads into an improperly wired or rated outlet.
- * Do not install the stair treads on a rough dirt or gravel surface
- * Periodically examine the stair treads for any signs of damage or excessive wear. If found, unplug and remove the stair treads immediately and call (973) 357-9797 for assistance.

HeatTrak is a Trademark of Heat Trak, LLC.

Important: All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their application. Heat Trak LLC makes no warranties as to the accuracy or completeness of the information, and disclaims any liability regarding its use. Heat Trak LLC's only obligations are those in the Heat Trak LLC Standard Terms and Conditions of Sale for this product, and in no case will Heat Trak LLC or its distributors be liable for any incidental, indirect, or consequential damages arising from the sale, resale, use, or misuse of the product. Specifications are subject to change without notice. In addition, Heat Trak LLC reserves the right to make changes—without notification to Buyer—to processing or materials that do not affect compliance with any applicable specification.

 
Worldwide Corporate Headquarters

Heat Trak, LLC
85-99 Hazel Street
Paterson, NJ 07503
USA Toll Free (866) Snow-mat
info@heattrak.com
www.heattrak.com

HeatTrak™ is a registered trademark of Heat Trak LLC



Heated Aluminum Stair Tread System

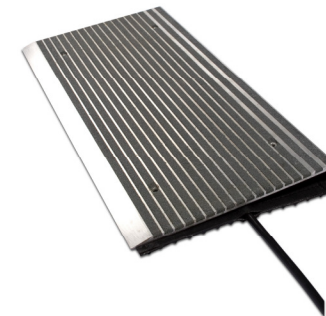

Instruction Manual

To be used only with the HRT Series below

HRT11-2	HRT11-2B	HRT11-3	HRT11-3B
HRT11-4	HRT11-4B	HRT11-5	HRT11-5B

1. Unpacking. Review the safety warnings on the back page, then take the HeatTrak™ stair treads to the spot where they are going to be used and unpack them there.

 
2. Clearing the Area. Clear all pre-existing ice and snow from the area where you will be using the HeatTrak™ stair treads. Make sure the surface is free of any sharp objects such as rocks, glass or loose nails, which could cause damage to the bottom of the treads.

3. Installing the HeatTrak™ Stair Treads System. The Aluminum stair system can only be used with the HeatTrak™ HRT rubber stair tread series. The stair treads can be installed at air temperatures down to -10°F.


3a. First install the rubber stair mats (HRT series). These mats have been provided to you already connected in groups. Each group of rubber stair mats has its own power supply cord. Depending on your requirements, we may have also provided you with an inline GFCI protection device attached to the power supply cord. This GFCI protection device can be installed into any properly grounded receptacle. **Note: If you have not requested a GFCI safety device with your mats, then you must make sure the circuit which these mats will run on has ground fault protection. Ground fault protection of 30mA is sufficient.**

Lay the rubber stair mats flat on each step with the electric connector cables as far to the side of the step as possible so as not to cause a tripping hazard.


IMPORTANT: Be sure the side of the rubber tread that says “This Side Up” is facing up on each landing.

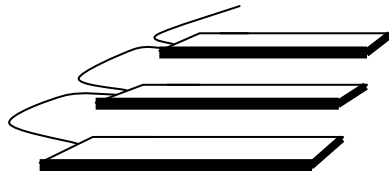

3b. Installing the aluminum covers over the rubber treads. The aluminum covers should be placed over the rubber treads sandwiching the rubber treads between the stair and the aluminum cover. Lay the aluminum cover on the step so that the aluminum cover's lip grips the rise of the stair (See below). The aluminum cover has been perfectly fitted in our factory to cover the rubber treads provided with it.

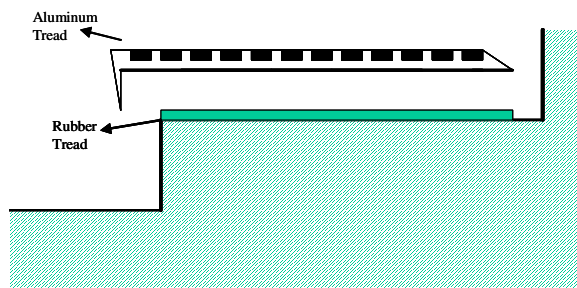 

IMPORTANT: The aluminum covers must be drilled into place over the rubber treads to prevent the treads from moving. Only drill into the existing holes on the perimeter of the Aluminum tread. Doing otherwise may cause damage to the heating elements inside the mat. Use 3/16 x 2” screws that are appropriate for the stair surface (i.e. wood, cement, steel). The holes are located on each corner of the top of the tread and on the front riser of the tread.

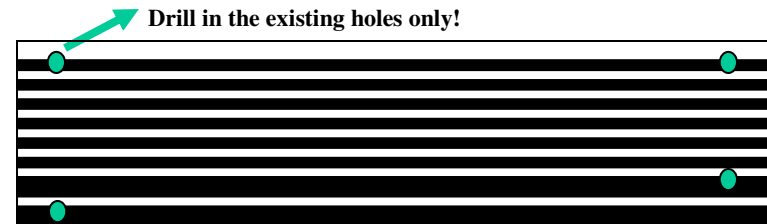 

4. Testing the Power Cord and Safety Device (only if your mats have come with an attached GFCI plug)

For general safety, the HeatTrak™ stair treads may have come with a built-in ground fault protection device. This device turns off the power and prevents fire if the mat is damaged.

It is important to test the device to be certain it is working properly- both after the mat is installed and before seasonal use.

Here is all you need to do:

- Locate the test and reset buttons on the device.
- Plug the power cord into the outlet. Press the reset button. The light should go on.
- Press the test button. The light should go out.
- Press the reset button again and the light should come back on.
- If the light does not come on, make sure there is voltage at the outlet.
- If the safety device still does not work, call **(866) Snow Mat** for customer service.